



OPERATING MANUAL

English

Model Range: SVP SL

SAVE THESE INSTRUCTIONS

Contents

Section 1

<i>Warning:</i> Installation	2
<i>Warning:</i> Operation	2
<i>Warning:</i> Disposal	3

Section 2

Instructions for use	4
Changing the bag and filter	5
Fitting Instructions	6

Section 3

Specifications	9
Dimensional Information	9

Section 4

Troubleshooting	10
Warranty	11

www.sweepovac.com





Section 1

IMPORTANT SAFETY INSTRUCTIONS

Dear Customer,

Please read through these operating instructions carefully. Please study and observe the safety instructions on the first few pages of this booklet. Please observe all cautionary markings in this manual, on the vacuum bags and on the Sweepovac vacuum appliance. Please keep these operating instructions for later reference and pass them on to any person carrying out cleaning, maintenance or repair, or to any subsequent owner of the appliance.

WARNING: INSTALLATION

To reduce the risk of fire, electric shock, or injury:

- A1 Installation must be carried out strictly in accordance with the supplied installation instructions.
- A2 *The appliance must be plugged into an outlet, located so that power can be readily removed from the appliance for the purpose of maintenance, cleaning and similar purposes.*
- A3 Ensure power can be switched off at the electrical panel.
- A4 Ensure any extension leads used are suitable and in good condition. Please consult an electrician if in doubt.
- A5 If removal of the supplied plug-top is required for installation, or replacement, it must be re-connected properly ensuring that the live and earth coloured wires are inserted correctly. PLEASE CONSULT AN ELECTRICIAN.
Always ensure that the cable clamp is fitted and that it clamps the cable outer and NOT the coloured wires.
- A6 If for any reason, it becomes necessary to replace a fuse, please consult an electrician to ensure that any new fuse is fitted correctly and complies with local building codes.
- A7 If the supply cable of the appliance is

damaged, disconnect the appliance from the outlet immediately. The complete Sweepovac electrical module will have to be replaced. This should be carried out by Sweepovac only, or its appointed agent.
If in any doubt please consult a qualified electrician or Sweepovac directly

A8 Fitting Clearances:

The vacuum must have the following clearances when fitted;

Rear of the machine to nearest surface – $\frac{3}{4}$ "(20mm). Top and bottom of the body of the machine to nearest surfaces – $\frac{1}{16}$ "(3mm).

Left hand and right hand side of the machine body- collectively – 3"(75mm) The compartment that the Sweepovac is fixed in should not be sealed and should have ventilation equivalent to 4" Sq (25 cm sq).

WARNING: OPERATION

To reduce the risk of fire, electric shock, or injury:

- B1 The Sweepovac unit is designed to handle normal dry dust and debris in a domestic or office environment. It is not designed to handle water, or superfine industrial dust. Do not install or use the Sweepovac vacuum outdoors, in a bathroom, a wet area, within 10 feet (3.1m) of a pool. Do not expose to moisture, rain or snow. Do not pick up water or sweep water into the Sweepovac vacuum.
- B2 *Do not pick up water, or any other liquid.* This will cause the product to fail, and invalidate your warranty.
- B3 It is not designed to pick up small sharp objects, such as pins, paper clips, small toys, etc.
- B4 *Do not use without a clean dust-bag and filter in place.* To do so can damage the appliance, and invalidate your warranty.
- B5 Do not operate the Sweepovac vacuum when the drawer is removed.



Section 1

- B6** Do not fit anything other than original Sweepovac dust bags or filters. To do so can damage the appliance, and invalidate your warranty.
- B7** Always remove the plug from the electrical outlet **or** switch off power at the electrical panel before attempting any form of user maintenance or cleaning as specified in this booklet.
- B8** This Sweepovac vacuum device is not intended for use by young children or infirm persons with reduced physical, sensory or reasoning capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction by a responsible person concerning use of the Sweepovac vacuum to ensure that they can use safely.
- B9** Do not allow to be used as a toy. Close attention is necessary when used by children. Children should be supervised to ensure that they do not play with the Sweepovac vacuum.
- B10** Do not sweep any combustible or flammable material such as gasoline or lighter fuel into the Sweepovac.
- B11** Do not sweep in anything that is burning or smoking, such as cigarettes. Do not sweep in hot or warm ashes from a stove, fireplace etc.
- B12** Do not place any objects inside the Sweepovac chamber when the drawer is removed.
- B13** Do not put your hand inside the Sweepovac chamber when the drawer is removed.
- B14** Do not disassemble the Sweepovac vacuum as incorrect assembly may result in electric shock, malfunction or fire.

WARNING: DISPOSAL

To reduce the risk of fire, electric shock, or injury:

- C1** The materials used in this product

comply with international EU Directives on the Restriction of Hazardous Substances (RoHS)

- C2** The symbol shown below and on the product, means that it is classed as Electrical or Electronic Equipment and should not be disposed with other household or commercial waste at the end of its working life.
- C3** If disposing of this product, please contact your local authority or the retailer where the product was purchased. In the event of difficulty, please contact Sweepovac directly.



0681





Section 2

INSTRUCTIONS FOR USE



- 1** Sweep dirt to a point in front of the Sweepovac.



- 2** Tap the lower part of the switch gently with the broom or with your foot.



- 3** Sweep in the dirt.



- 4** Clean the brush head by rubbing the bristles over the powerful suction.



when the bag is full
this light will come
on during normal
operation

- 5** 1 - Tap the switch and the Sweepovac will turn on for 10 seconds.
2 - Hold the switch in for 3 seconds and the Sweepovac will come on for 5 minutes – The

five minute function is for when the Sweepovac is being used with the attachable hose (please see accessories on Page 10)

Cleaning: To clean the front face of the Sweepovac. Unplug or switch off at the electrical panel. Rub the front using a slightly dampened cloth.





Section 2

CHANGING THE BAG AND FILTER



- 6** Slide out the bag drawer.



- 7** Hold the bag upright when removing to prevent dirt spilling out.

Disposable bags should be changed every 12 weeks. Re-usable bags should be emptied every 12 weeks. The entire drawer can be carried to the garbage when emptying or changing bags. When re-inserting the bag, ensure the 3 cardboard lugs are slotted home.



- 8** It is recommended to clean the filter every 12 months or if it appears dirty on visual inspection.

To clean, remove and tap to shake off excess dust. It may be washed gently with warm water. Leave to dry thoroughly before re-inserting.

HOW DO YOU KNOW THE BAG IS FULL?

1. If the light flashes on when in use.
2. If it is unable to suck up all the dirt.
3. If dirt has to be brushed right into the opening to be vacuumed up.
4. If the motor sound changes.



- 9** Push the drawer home until it clicks back into place.





Section 2

FITTING INSTRUCTIONS

Contents – What's in the box



10 The Sweepovac unit




11 Dust bags x 3 and Hepa Filter x 1



12 Re-usable dust bag




13 T4 * No 6 flathead Philips wood screws - $\frac{3}{4}$ " long (17mm)

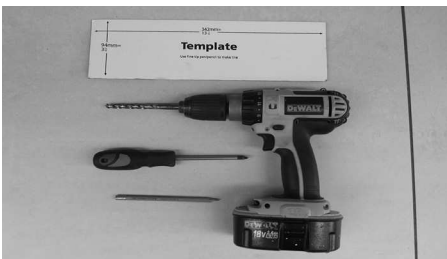

15 Tools required

- Pencil or fine point marker
- 1/2" to 1" drill bit
- Jigsaw or sawzall
- Cut out template (included)
- Philips head screwdriver No 2

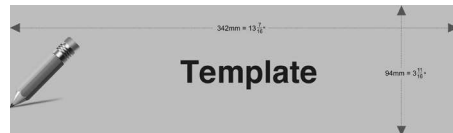

14 Template for marking the cut out



16 A Jigsaw OR a Sawsall can be used to cut the opening.






Section 2

FITTING INSTRUCTIONS

How to fit the unit

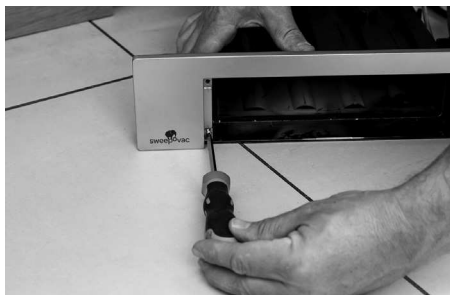


- 17** Take the Sweepovac from the box and remove the 4 hex head screws holding the face plate on.



- 18** Unclip the face plate by gently releasing from the plastic clips holding it to the body. A small flat head screwdriver used gently may assist with this. Remove the faceplate.

IF YOUR KITCHEN CABINETRY HAS BEEN SUPPLIED WITH THE SWEEPOVAC OPENING ALREADY PRE CUT IN THE TOE KICK, THEN PLEASE PROCEED TO THE NEXT PAGE.


GO TO PAGE 8

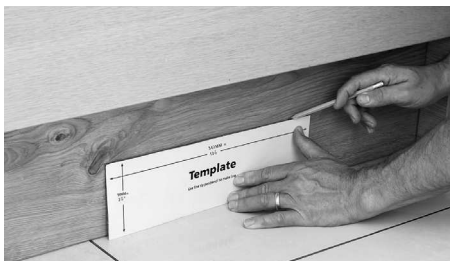


- 19** Place template against the surface and mark with a fine tipped pen.



- 20** Drill corner holes

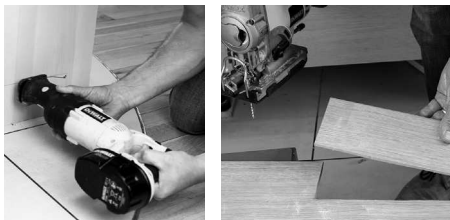

- 21** A jigsaw can be used when the Sweepovac is being fitted in a removable toe-kick. A Sawsall can be used when fitting in a fixed toekick or fixed end panel.

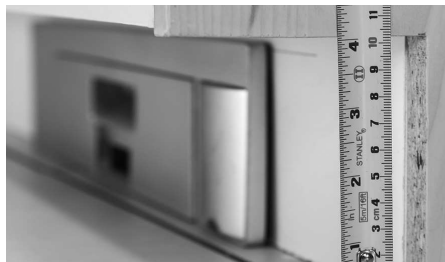

- 22** The Sweepovac can be fitted in any toe-kick that is 4" (100mm) or greater.



Section 2

FITTING INSTRUCTIONS

How to fit the unit



- 23** Use the levelling foot to ensure the unit will sit level when fitted.



- 24** Slide in the power cable and locate it beside the outlet it will be plugged into.



- 25** Slide in Sweepovac unit.



- 26** Screw into place using the 4 wood screws.



- 27** Clip the face plate back on to the machine and insert the 4 screws.



- 28** Slide in the drawer ensuring that the bag and filter are in place



- 29** Plug the Sweepovac into a standard electrical outlet 120V (US) or 220-240V (EU)



- 30** Unit is fully fitted. Well done.





Section 3

SPECIFICATIONS

Switch:

The switch is on a 10 second timer and will turn off automatically after 10 seconds. Gently kick or **tap the bottom part of the switch**. Kick once for on. Kick once for off.

Note:

When using the Sweepovac with the extendable hose. Hold the switch in for 3 seconds and the Sweepovac will come on for 5 minutes. Tap the switch at any time to turn off.

Automatic turn off (10 sec timer). Stroke movement of switch: 1/4 inch (6mm).

Motor: 650 watt

Bag capacity:


0.5 gallon (1.8L). The bag must be changed every 12 weeks (for normal domestic use.) It is recommended to change the filter once a year or if it appears dirty on a visual inspection.

Bag Specification:



50g brown outer paper + 30g spun-bound non woven with antibacterial agent. Micro filtration. Bag pre-filled with carbon particles for extra anti bacterial effect.

DIMENSIONAL INFORMATION

Front

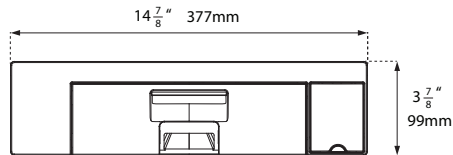

Side

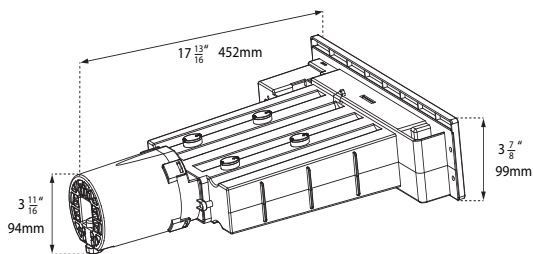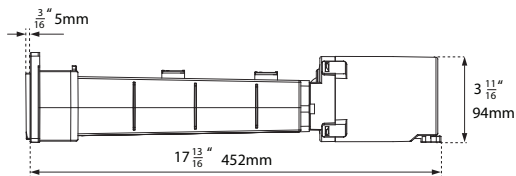

View of the part of Sweepovac that is inserted beneath the kitchen unit.

Accessories



- 31 A clip on extendable hose complete with three clip on tools can be ordered separately.



- 32 If you have the extendable hose, simply clip into the front of the Sweepovac ensuring that the arrow is visible on top of the clip in section.



- 33 The hose extends from 6" (1.8m) to 18" (5.5m). Do not extend the hose past it's natural limit.





Section 4

TROUBLESHOOTING

If suction reduces or the Sweepovac does not vacuum up the sweepings.

Open the drawer and check if the bag is full. When changing the bag, make sure to hold the bag tray with the front pointing upwards. This will prevent any dirt falling back out through the opening. Replace old bag with a new bag. The filter located at the rear of the bag tray can be cleaned if it appears dirty on visual inspection. Try again.

If the Sweepovac stops operating.

The Sweepovac motor has a thermal cut out. If the motor overheats, check for blockages and wait for one hour before operating again. Check that other electrical outlets in close proximity to the Sweepovac are working. Check the electrical panel for the house.

If you accidentally operate the Sweepovac without a bag.

Unplug from the outlet. Remove the bag drawer and use the hose of a normal vacuum cleaner to clean out the internal cavity of the Sweepovac. Clean the filter and insert a new bag.

To check for and remove a blockage at the inlet aperture.

Remove the bag drawer, hold the drawer vertically with the front pointing upwards, this will allow the sweepings to fall to the rear of the bag. Lay the drawer flat, remove the bag, insert a single finger through the bag holding pipe, any obstruction will be felt and can be removed. A finger can also be inserted into the outside opening where the dirt is vacuumed through.

To check for and remove a blockage at the motor inlet.

Ensure the Sweepovac is unplugged. Remove the bag drawer. Visually inspect the rear of the cavity where the bag drawer sits. A grill at the rear protects the motor. This grill should be free from any obstruction.

If none of the above are effective.

Contact an electrical repair shop or Sweepovac if the warranty is still valid.

To remove the entire Sweepovac appliance from it's location.

Consult the fitting instructions that accompanied this manual, ensure that the Sweepovac is disconnected from the power before removal.



Section 4

WARRANTY

Dear Customer,

Thank you for purchasing a Sweepovac unit. The Sweepovac unit and associated products are designed and manufactured to a high standard and with normal use should last many years. The warranty period on your Sweepovac unit is 2 years from the date of purchase. To gain warranty assistance in the unlikely event of the unit not working, you will need to provide us with a copy of your proof of purchase (Invoice, sales receipt etc.). The period of warranty is calculated starting 2 weeks after this date. This is to allow for timely installation.

Warranty assistance includes: Replacement of unit if deemed faulty. Please note that the customer is responsible for the removal of the faulty unit and packaging and mailing of the unit back to Sweepovac. Sweepovac will cover the cost associated with the return of the replacement unit back to the customer.

Normal use is described in detail in the operations section of this manual. It includes : Never allowing water to come into the machine or near the electrical parts inside the machine. Ensuring that wet debris or heavy items are never vacuumed into the machine. Please insure that the unit is installed as per installation instructions. We recommend changing or emptying the vacuum bag every 12 weeks (for normal domestic use). Please ensure that any malfunction is checked against the trouble shooting section in this manual before removal and dispatch to Sweepovac. Please contact a registered electrical contractor to replace any damaged cables immediately.


We hope you enjoy your Sweepovac.

www.sweepovac.com

General Terms and Conditions

1. Sweepovac warrants that, when dispatched from a Sweepovac warehouse, the appliance is free from defects in materials and workmanship for the warranty period.
2. The warranty period is 24 months from the registered date of purchase.
3. The warranty only applies to products that have been installed in accordance with the enclosed Sweepovac installation instructions.
4. The warranty only applies to products that have been operated and maintained in accordance with the enclosed Sweepovac Operation/Maintenance Manual.
5. During the warranty period, Sweepovac, or its authorized agents, will, at no extra charge and subject to these terms and conditions, repair or replace any parts which it considers to be defective.
6. This warranty does not apply to dust bags, filters, accessories or similar consumable parts.
7. The warranty does not apply in the following situations:
 - a. Incomplete or improper installation.
 - b. Vacuuming of very fine dust or wet materials.
 - c. Use without recommended dust-bags or filter.
 - d. Use of non-recommended dust bags or filters.
 - e. Normal wear and tear.
 - f. Failure to properly maintain or service.
8. Proof of purchase is required before you can make a claim under this warranty.



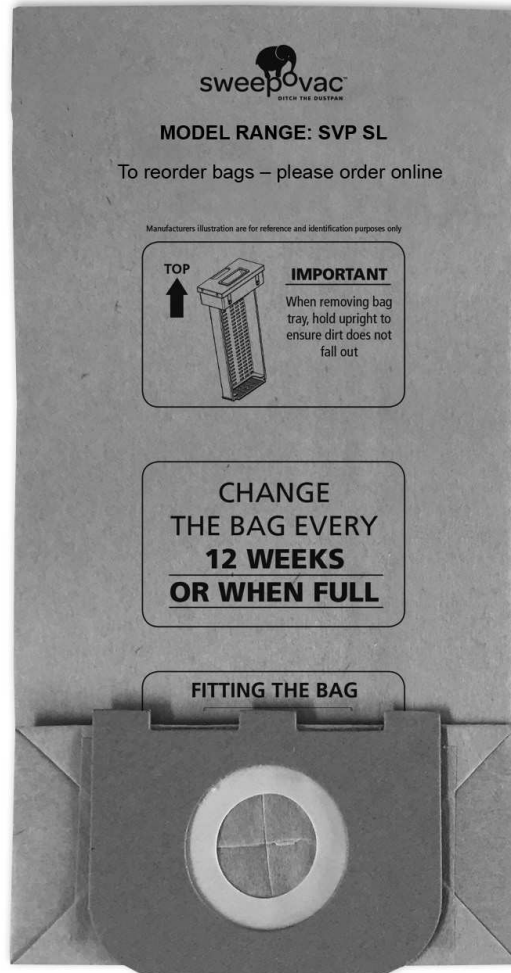

To purchase disposable bags, filters or
re-usable bags please go to:
www.sweepovac.com

www.sweepovac.com

