

TANDEM plus BLUMOTION 560F | 566F

Webcode
DQHL6M

Planning


Space requirement in cabinet	Drawer inner drawer	Drawer	Inner drawer
	<p>SKW Internal drawer width LW Internal cabinet width</p>	<p>SKL Drawer length NL Nominal length</p>	<p>ISKL Inner drawer length SKL Drawer length NL Nominal length X Front thickness * Additional +2 mm with POSISTOP</p>

Hole spacing – runners

Nominal length NL (mm)	Hole spacing diagram
250 270	
300 350	
400	
450	
500 550	
600	
650 700 750	

* Hole only at 566F (50 kg)

Drawer assembly

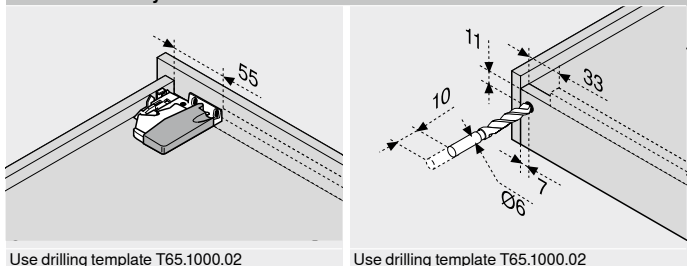

Use drilling template T65.1000.02

Use drilling template T65.1000.02

Page instructions

Overview – TANDEM	409	TANDEM 19 mm
Overview – SERVO-DRIVE for MOVENTO TANDEM	455	
CABLOXX	552	Short-URL
Accessories	444	www.blum.com/i011
Attachment of runners	452	
Overview – assembly devices	561	
More technical details	662	



Assembly, removal and adjustment

Short-URL
www.blum.com/a420

