



Full extension undermount slides installation


16mm /19mm Drawer installation dimensions(with locking device)

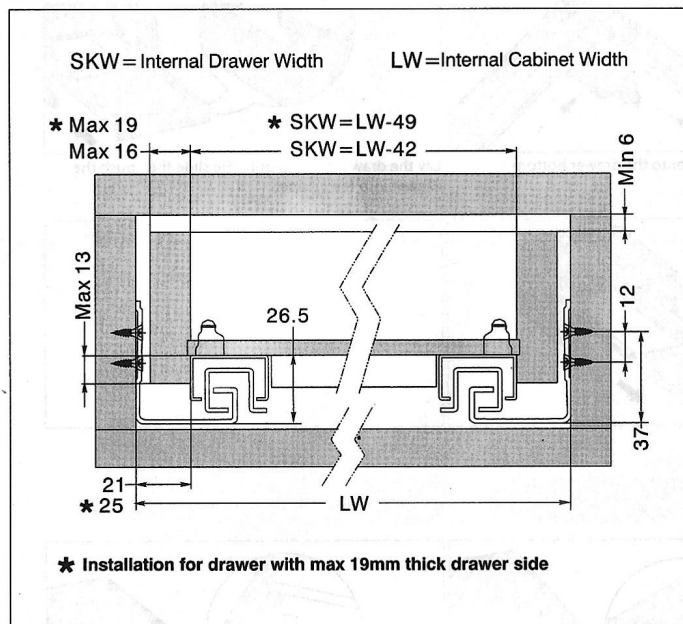


16mm /19mm Drawer installation dimensions(with peg)

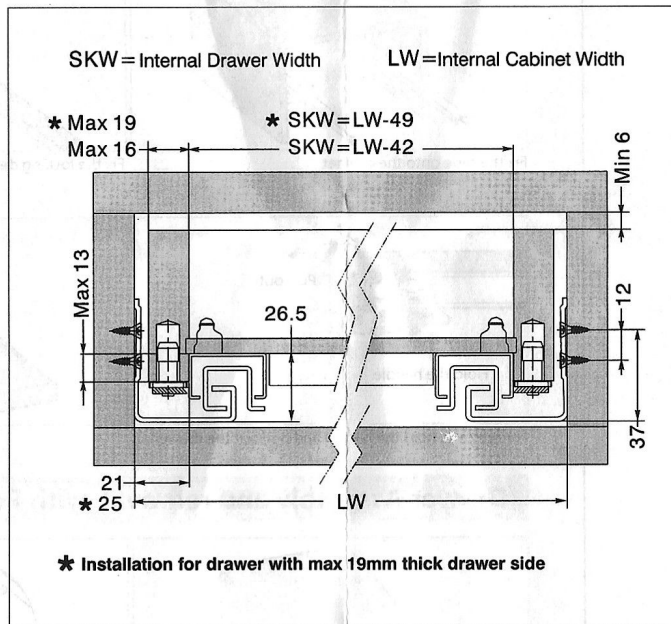


Standard drawer installation dimensions

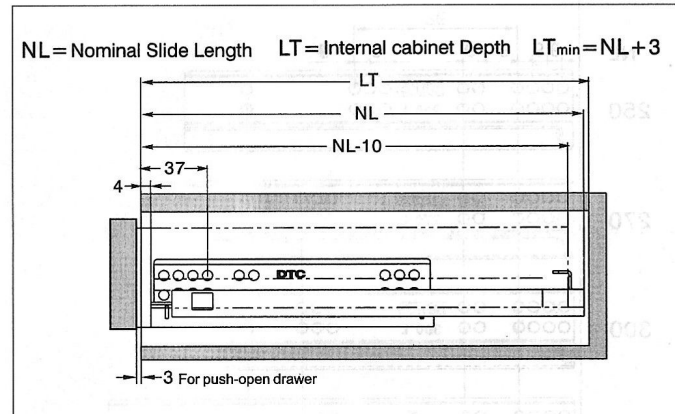


Inner drawer installation dimensions

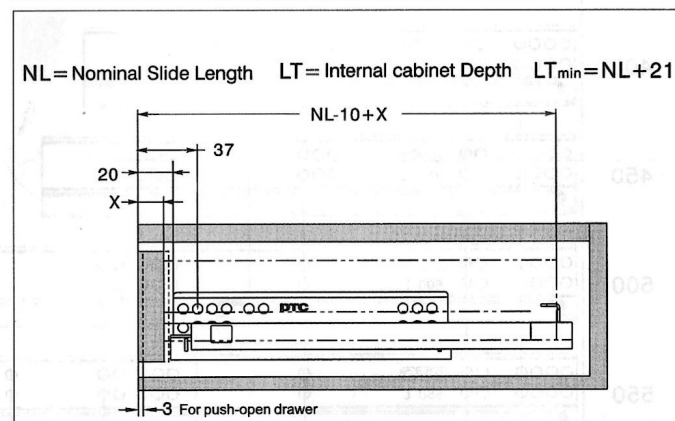



Drawer preparation

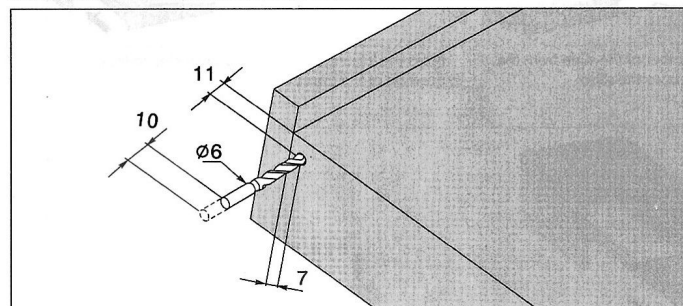


Drawer preparation

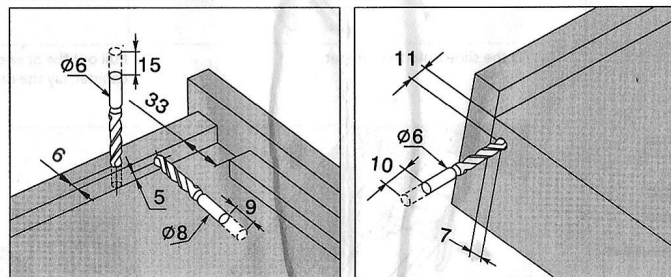

Locking device installation

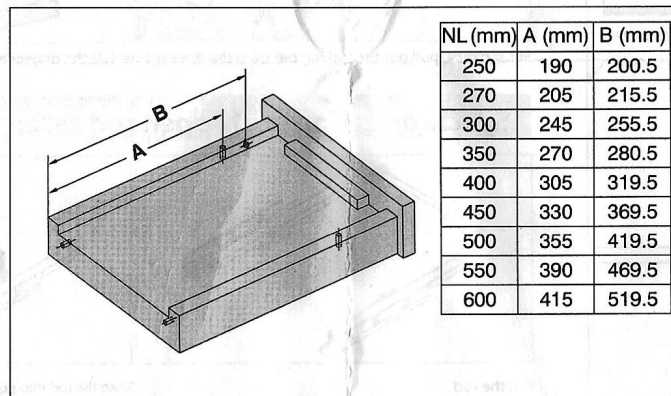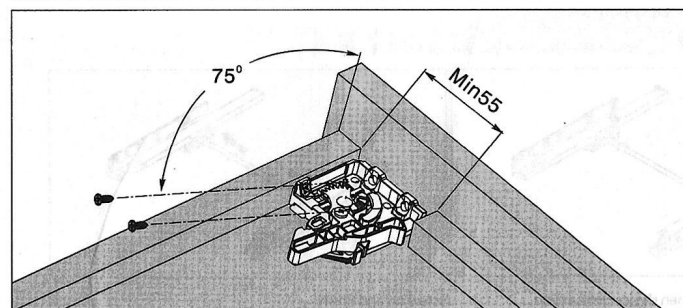


Cutting dimension of rod for Push-open synchronization (mm)

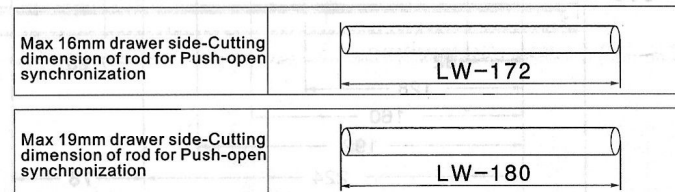

DTC
Global Quality Benchmark

Website: www.dtcetc.com


Screw Positions of the Slides

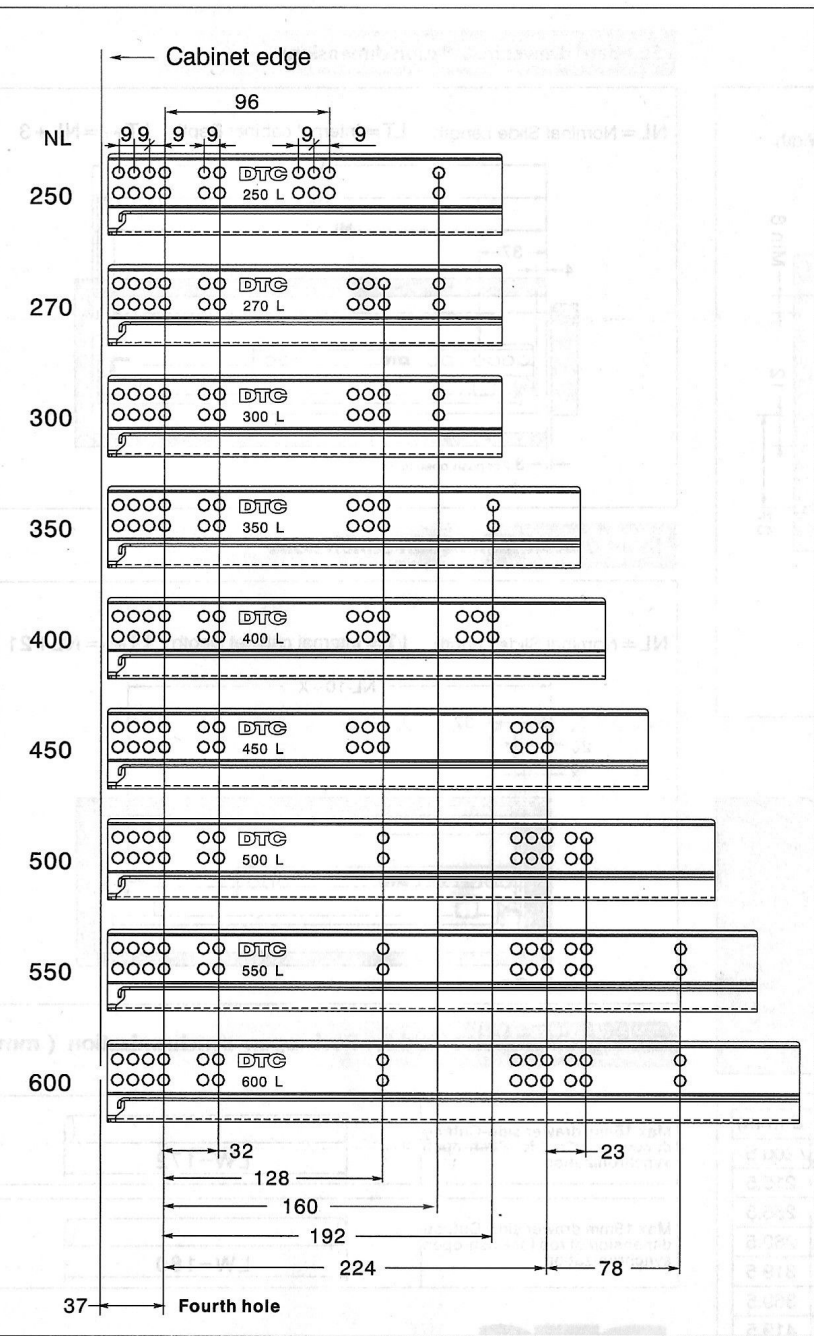


Fixing hole position for inner drawer

37 Second hole


Drawer Assembly and Removal with Locking Device

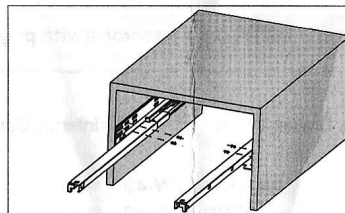


Fix the slide onto the cabinet

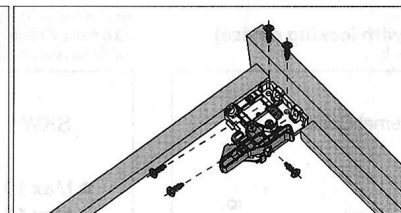


Fix the locking device onto the drawer bottom

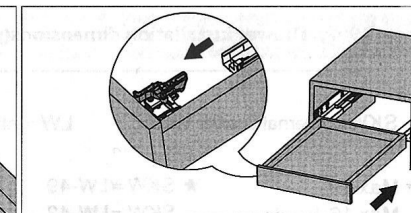


Lay the drawer bottom onto the slide then push the drawer into the cabinet

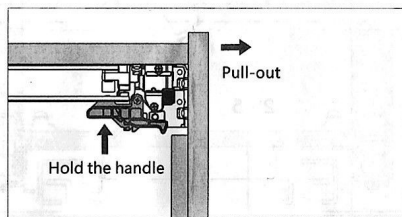


For removal, hold the handle and pull out the drawer

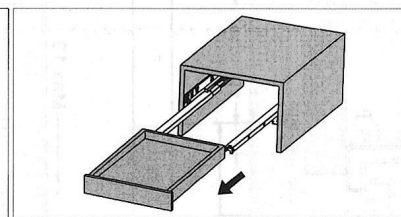


Drawer Assembly and removal with Peg

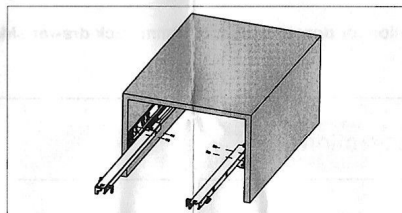


Fix the slide onto the cabinet.

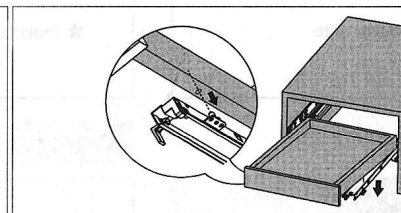


Pull out the drawer member of the slide from the cabinet, lay the drawer onto the slide

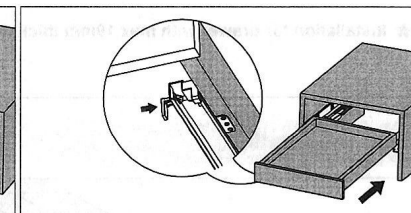


Press the locking pin into the drawer side to lock the position of the drawer

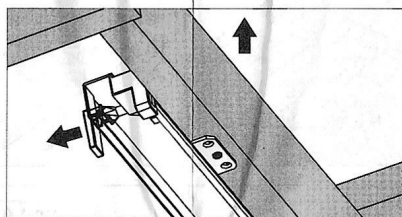


For removal, pull out the locking pin from the drawer side. Lift the drawer and pull it out from the cabinet

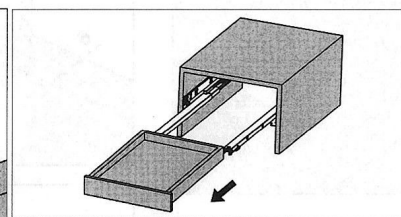


Synchronization push-open rod assembly

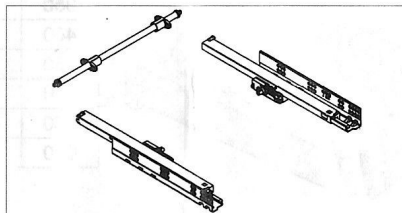

Cut the rod

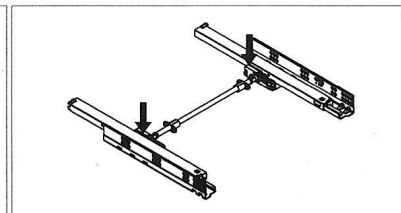

Snap the rod into push-open device on the slide

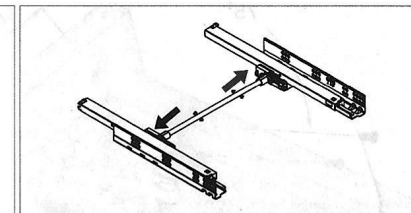

Screw on and finish